


# Door cross sections - Measurements

PROGET Fire doors




PROGET  
fire doors


## One-leaved doors Horizontal cross section

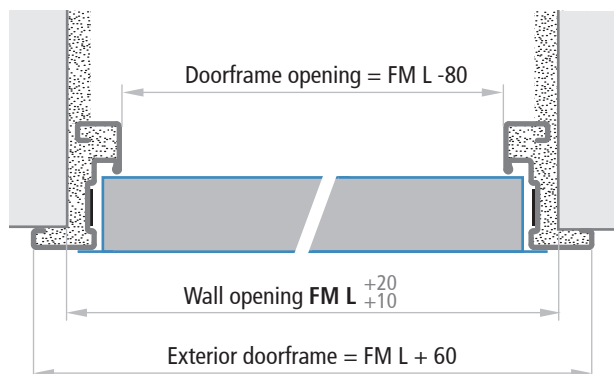

## Doors without lower threshold Vertical cross section

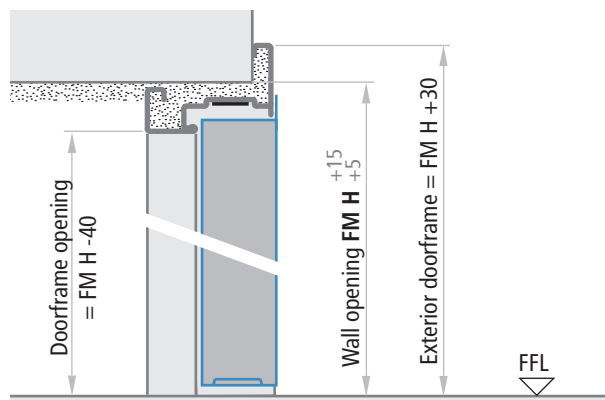

## Two-leaved doors Horizontal cross section

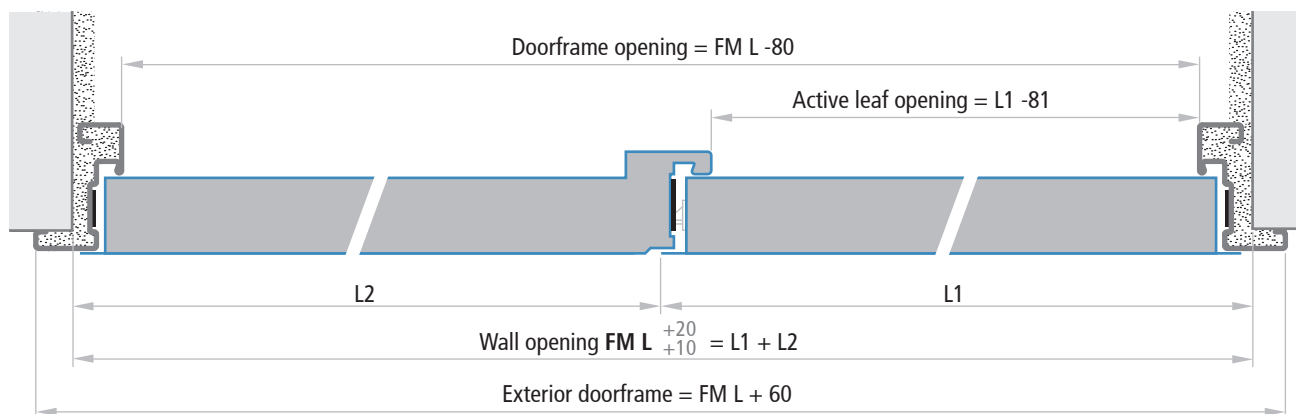

## Leaf thickness

REI 60, REI 120	60 mm
-----------------	-------

### NOTE

The tolerances  $FM L +20$ ,  $FM H +15$ ,  $FM L +10$ ,  $FM H +5$  of the indicated measurements make it easier to fill the gap between the wall and the doorframe with cement mortar.

For dry wall installation, the holes must be precise and greater tolerance ranges should not be employed.

FFL = Finished floor level


## INSTALLATION WITH ANCHORS FOR MORTAR FIXING

The standard installation method for Proget doors is to use the anchors for mortar fixing. Appropriate cuts will need to be created in the walls (section 80 x 200 mm). The anchors should be bent and blocked inside the wall. For fire sealing purposes and mechanical hold, the space between the doorframe and the masonry should always be filled with concrete mortar.




### One-leaved doors

FM L = from 500 to 1035 x FM H = from 1775 to 2200

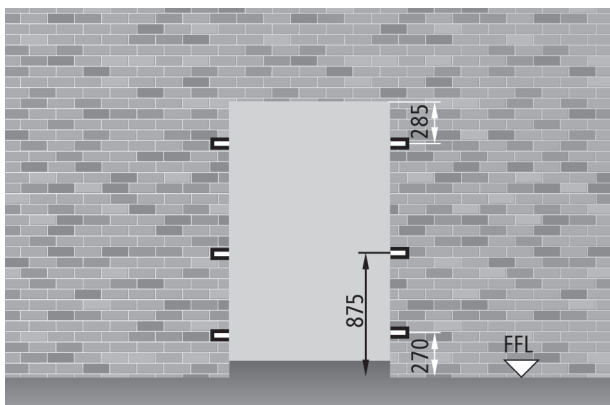


FM L greater than 1035 and/or FM H greater than 2200

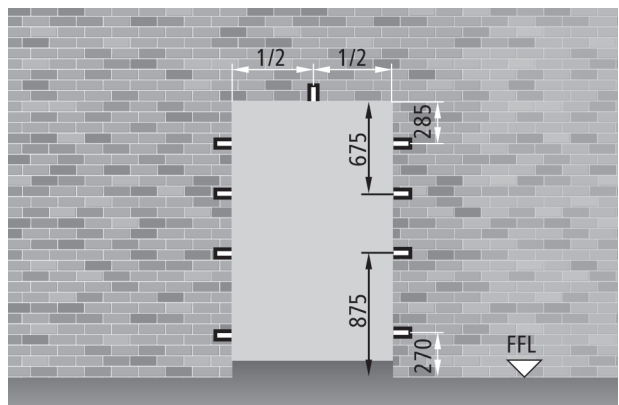


### Two-leaved doors

FM L = from 850 to 2070 x FM H = from 1775 to 2200

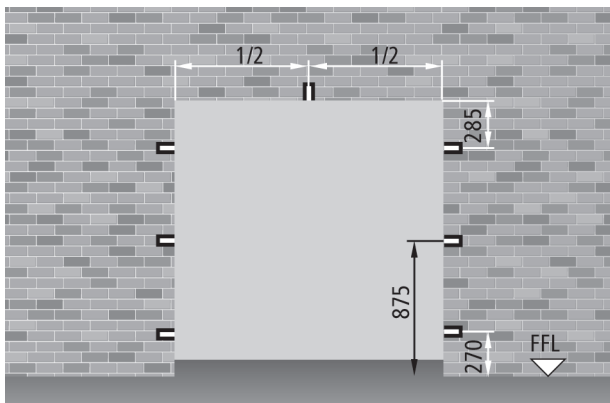

FM L greater than 2070 and/or FM H greater than 2200

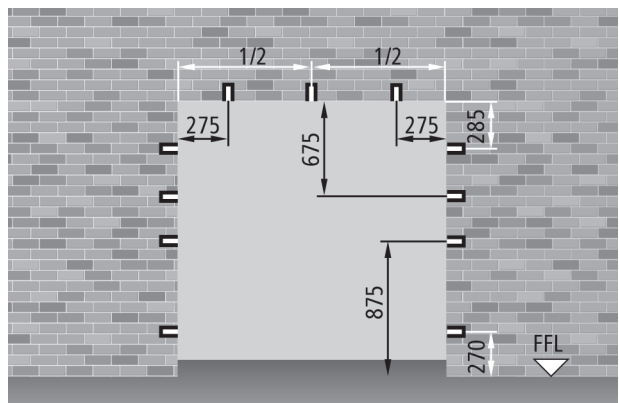

#### NOTE

For proper installation, the cuts for the anchors should be 80 x 200 mm in size.